


## Installing NOV Fiber Glass Systems 'Success by Design' software on 64-bit Operating Systems


Part 1: Check your version of Windows. The update required to use Success by Design (SBD) on Windows 7 requires one of the following versions of Windows:

- ✓ *Windows 7 Professional Edition*
- ✓ *Windows 7 Ultimate Edition*
- ✓ *Windows 7 Enterprise Edition*

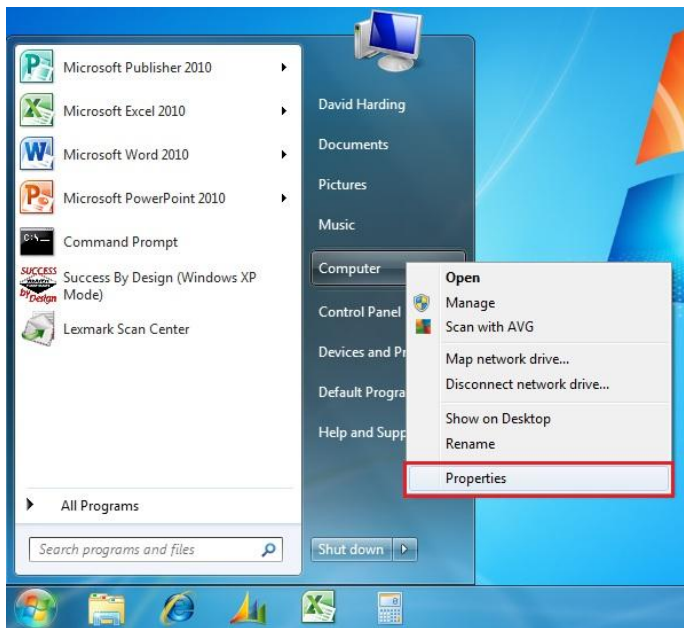

To find out which version of Windows you are running, navigate to:


Start Menu -> Right-click Computer -> Properties

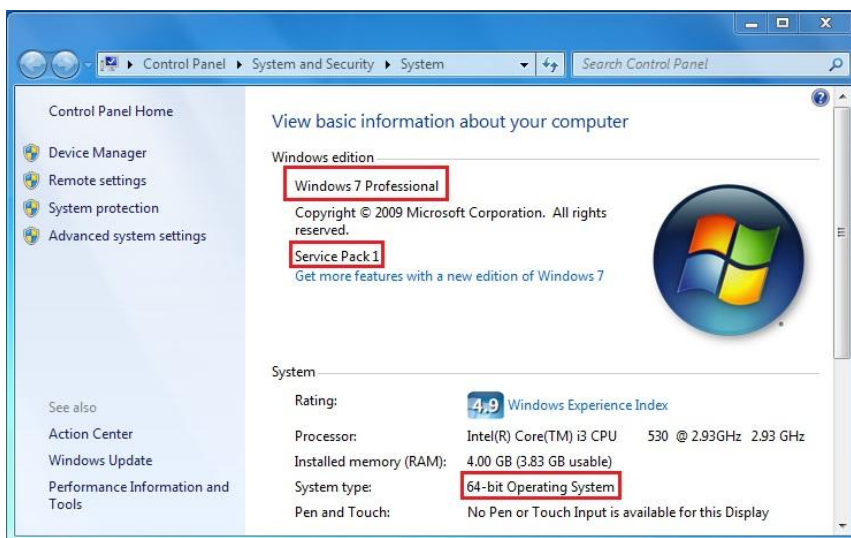

This system is running *Windows 7 Professional Edition 64-bit*.

Note that "Service Pack 1" is also present on this system. An additional download will be required if Service Pack 1 is not installed (discussed later).

Part 2: Navigate to <http://www.microsoft.com/windows/virtual-pc/download.aspx> using your browser.

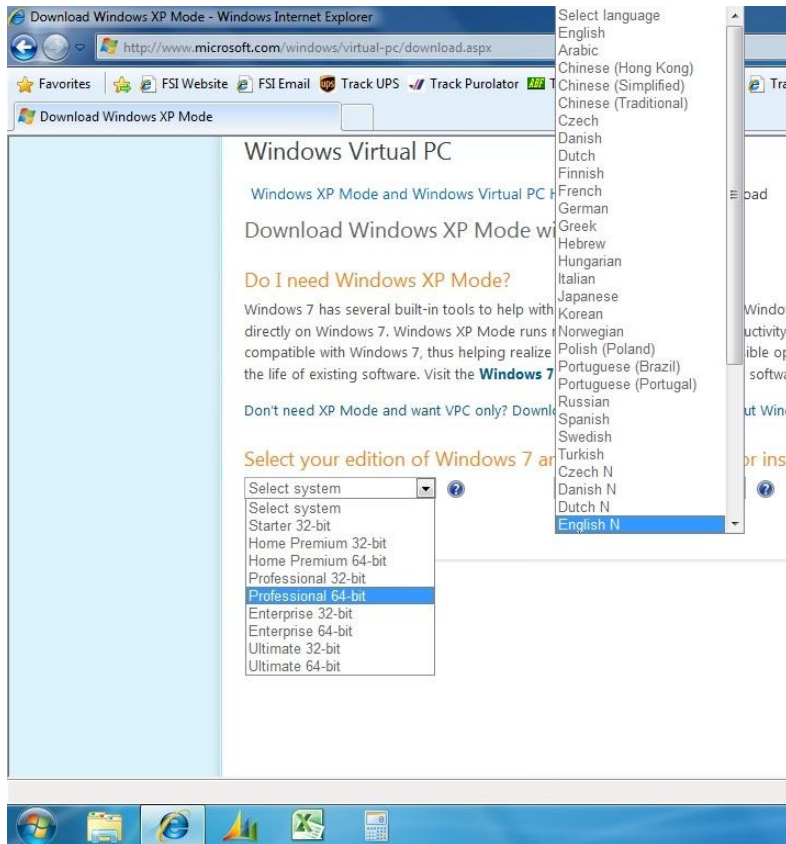

Select your appropriate Windows version and desired language. *Windows 7 Professional 64-bit* has been chosen in this case.

Part 3: Download and save both files, 'Windows XP Mode' and 'Windows Virtual PC'.

Select your edition of Windows 7 and desired language for installation

Professional 64-bit English N

Download and install Windows XP Mode

Windows XP Mode requires downloading and installing the files below.

**STEP 1**

Email Instructions | Print Instructions

We recommend to bookmark this URL and Email or Print instructions before you reboot your system to complete installation.

**STEP 2** Windows XP Mode

**Download**

Windows XP Mode is a 500 Mb file and may take several minutes to download.

**STEP 3** Windows Virtual PC

**Download**

**STEP 4** Windows XP Mode \*

**Update**

Step 4 not needed if you are running Windows 7 SP1

Which edition of Windows do I have? ⓘ

Enables Windows XP Mode for PCs without Hardware Assisted Virtualization Technology. For more information, visit the Frequently Asked Questions page.

Follow steps 2 and 3 on Microsoft's website. Windows Validation will be requested and must be allowed before you can download the required files (pictures on the following page).

**Step 4 on Microsoft's download page is only required if your system does not have Service Pack 1 installed (refer to step 1 above).**

## Windows validation required

Windows validation components must be installed before any other downloads begin.



The validation software you are about to download works with most browsers. Once installed, it will attempt to repair Windows 7 licensing components that may have been damaged, moved, or deleted. From time to time, this software will also perform a validation check to make sure that Windows 7 running on your PC is genuine and stays that way. View the [privacy statement](#).


[Continue](#)

[Cancel](#)

*Microsoft requesting permission to validate the installed Windows operating system.*


## Windows validation in progress

This may take a few minutes, do not navigate away from this page.

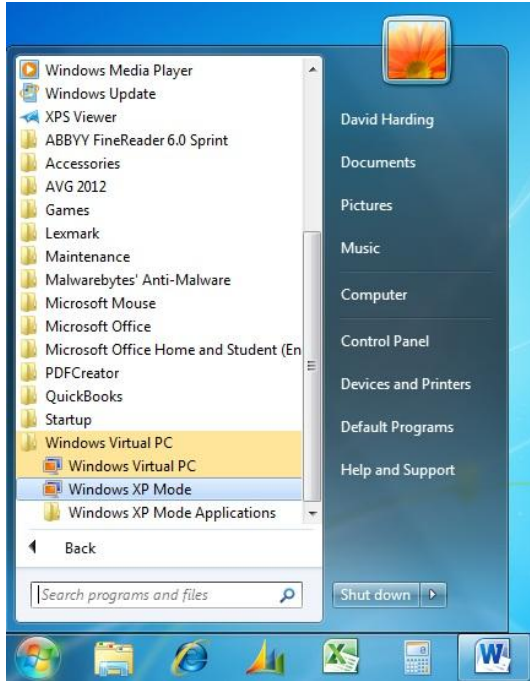


Part 4: Install 'Windows XP Mode' and 'Windows Virtual PC'. You will have to restart your computer following the installation. After restarting, we can now see that Windows Virtual PC and XP Mode are present in the Start Menu.



Opening Windows XP Mode gives us a virtualized Windows XP environment that will allow us to install SBD:

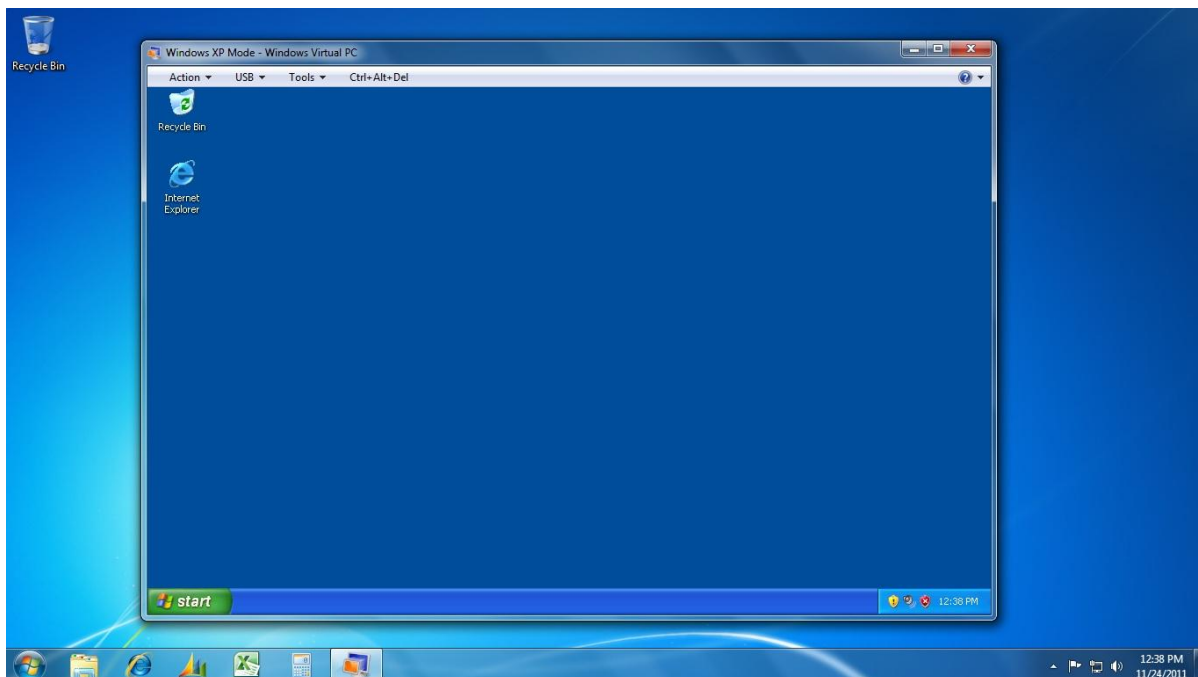

## Part 5: Install Success by Design within Windows XP Mode.

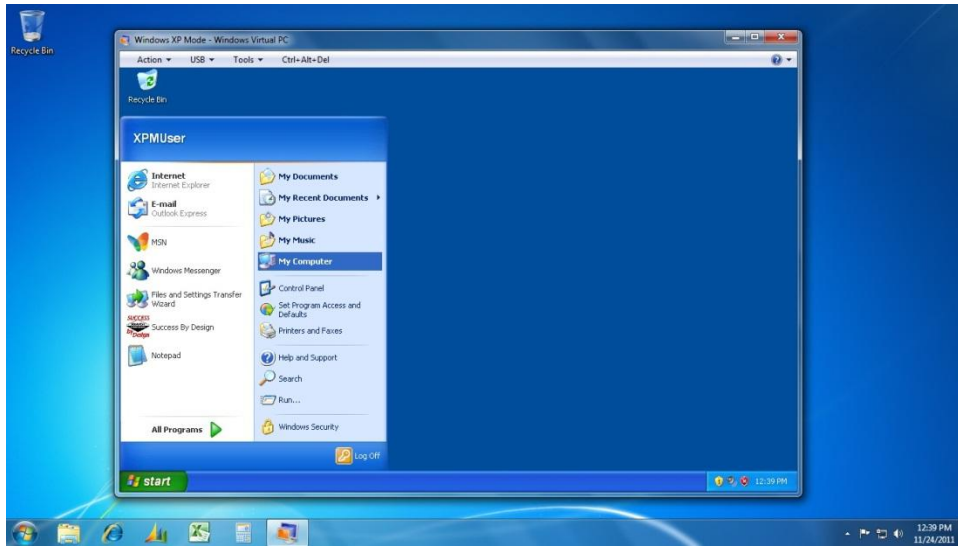


Navigate to Start Menu -> My Computer -> Right-click CD-ROM drive -> Autoplay.

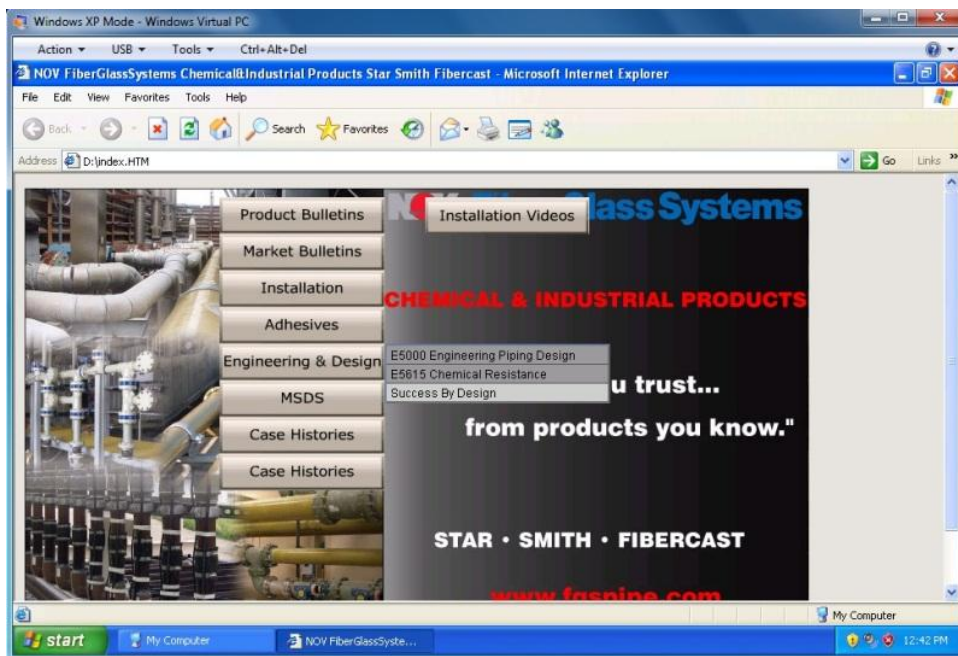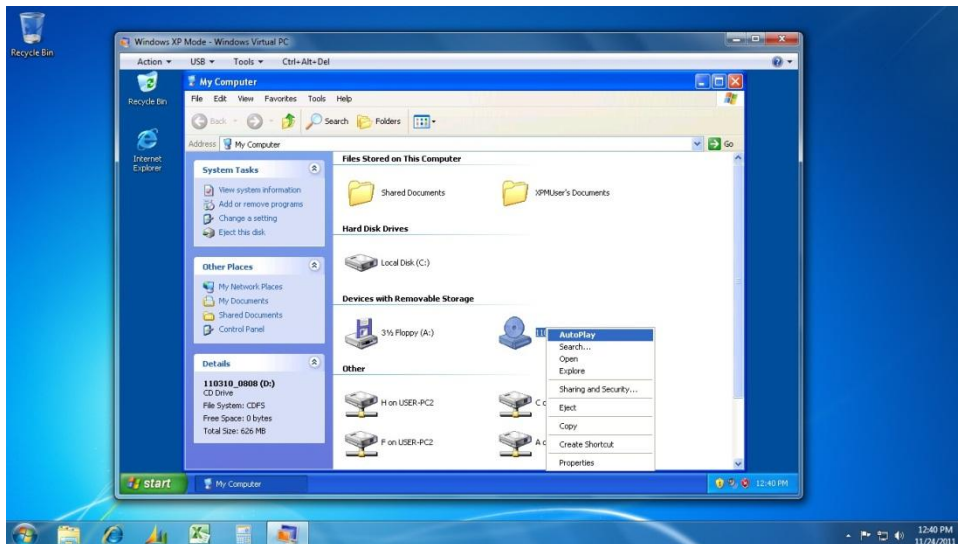


The index menu for Fiber Glass Systems' Chemical & Industrial Products CD will open.


Navigate to Engineering & Design -> Success by Design.

Proceed with the installation of Success by Design, leaving the default install directory.

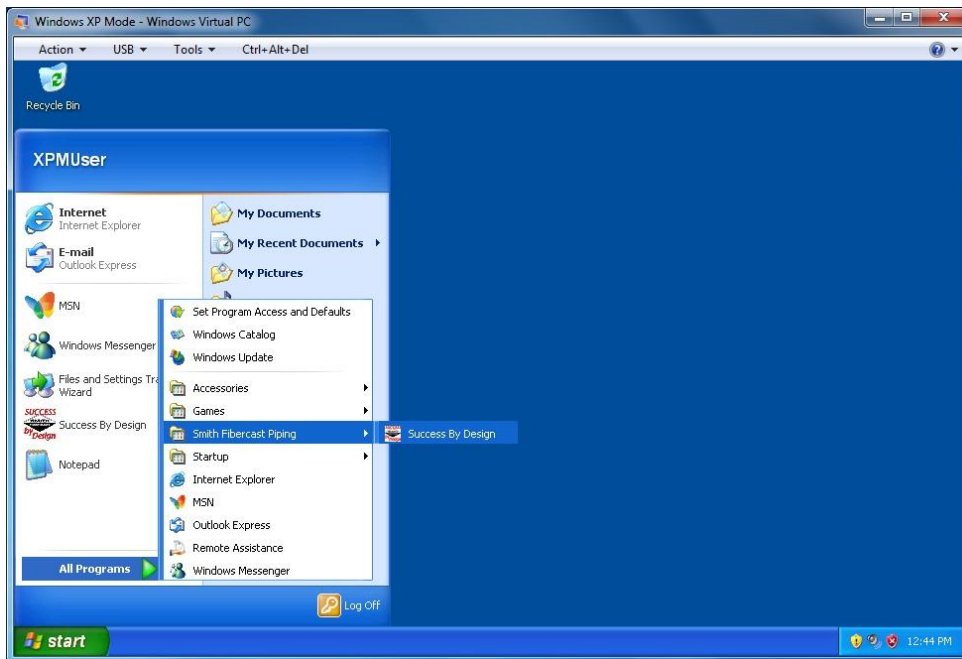

We are now able to access Success by Design through the Start Menu of XP Mode if it is already open, or directly through our Windows 7 Start Menu.

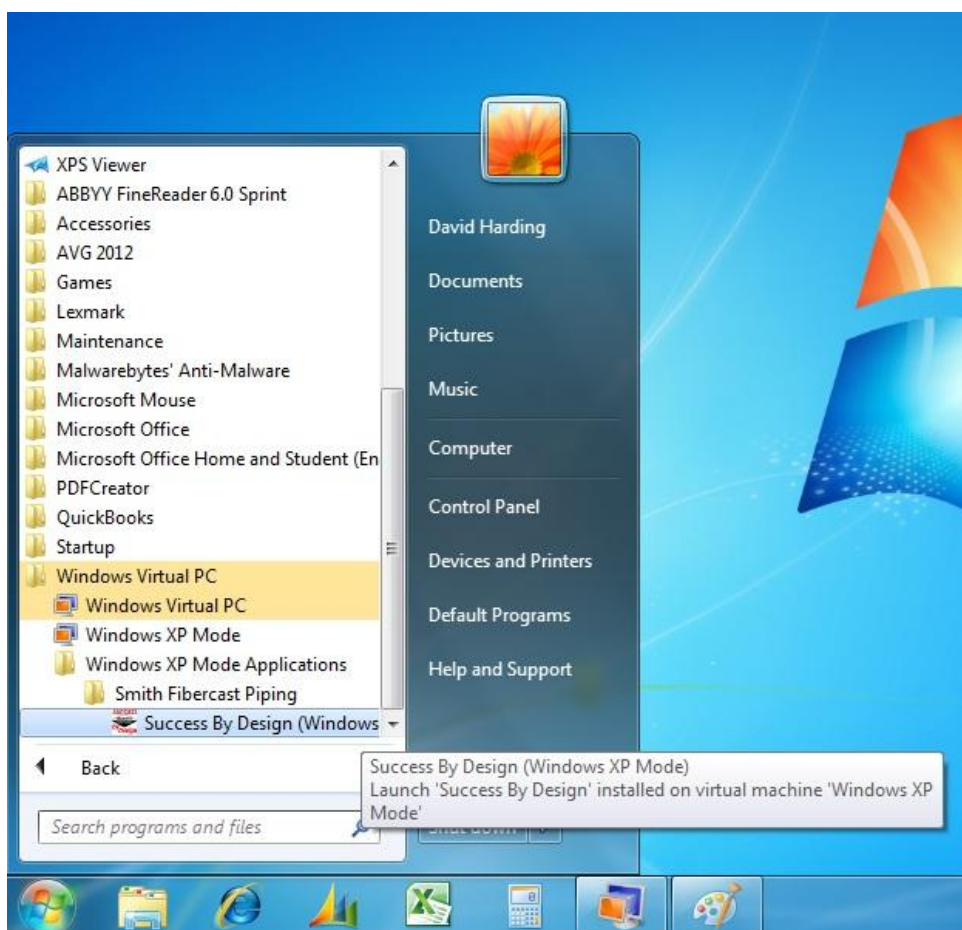

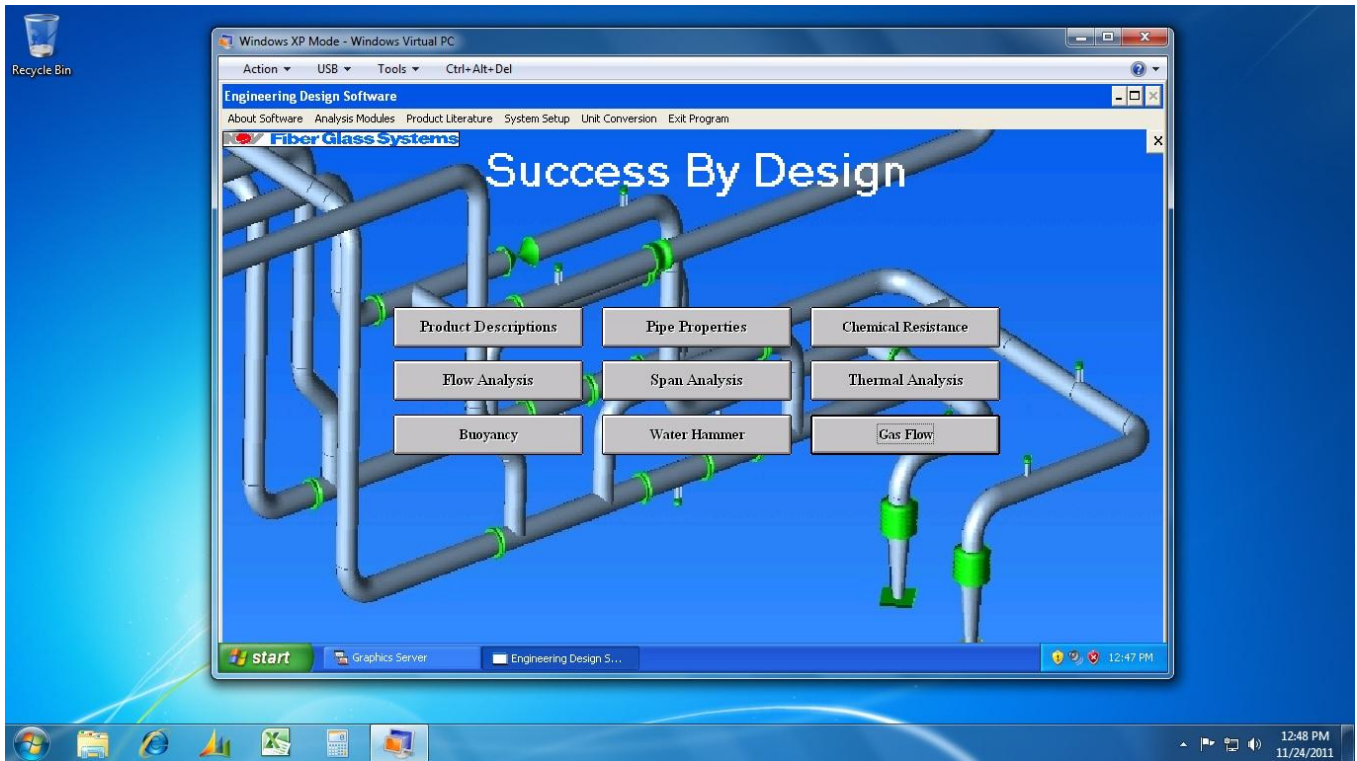

*Voila!*

